

SHOWER WALL SETS

Solid-surface wall sets, 84 in

Three-panel wall sets for 60 in alcoves: grout-free panels with the color molded all the way through. Sold as a complete set, or as a back panel or side-panel pair on its own. Made in the USA.

Patterns and colors

Wall set	Pattern	Colors
Classic Subway	3 × 6 in simulated tile	White
Modern Subway	6 × 24 in tile, textured grout line	White, Gray Speckle, Sand Speckle
Traditional Subway	12 × 24 in tile, textured grout line	White, Gray Speckle, Sand Speckle
Plain Panel	No pattern	White

Dimensions

Piece	Size (in)	Approx. ship wt.
Back panel (1)	62 W × 84 H	115 lb
Side panels (pair)	36 D × 84 H, each	135 lb
Complete set (3 panels)	62 W × 36 D × 84 H	247 lb
Nominal thickness	1/4 in (Modern and Traditional Subway)	
Size tolerance	± 3/8 in. Measure the panels before final framing.	
Fits	Alcoves up to 62 in wide and 36 in deep; panels trim on site	
Other sizes	72 or 96 in tall, 30 to 38 in deep, 50 in back panel, more colors: by quote	


Material and ratings

- Compression-molded solid surface with glass reinforcement
- Non-porous: resists mold, mildew and stains; no grout to seal
- Color and texture run all the way through: no coating to chip or crack
- Stands up to household cleaners and solvents
- Modern and Traditional Subway: Class A flame spread (ASTM E-84); ANSI Z124; IAPMO Z124; NEMA LD-3; cUPC listed

Shipping

Ships on a pallet by LTL freight to all 50 states; liftgate home delivery available. Inspect the delivery with the driver and note any damage on the delivery receipt before signing.

Plan view

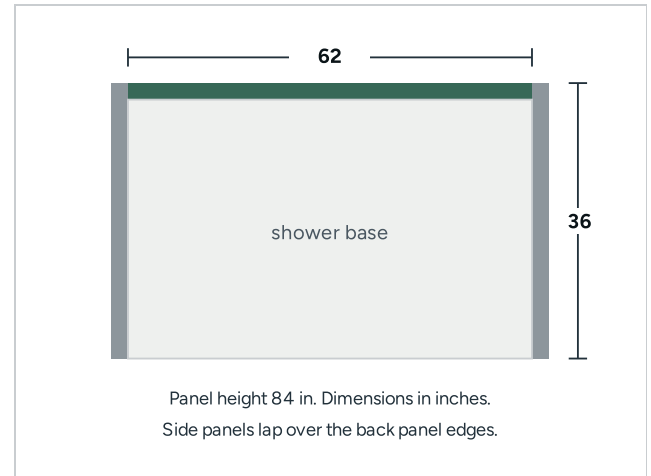

In the box

- Complete set: 1 back panel and 2 side panels, stacked on a pallet
- Back panel or side-panel pair also sold on its own

Installation at a glance

- Bond to a sound, primed wall with 100% clear silicone, 4 to 10 tubes
- Substrate: 1/2 in moisture-resistant drywall, cement board or plywood, or firmly bonded ceramic tile
- Walls plumb and square within 1/8 in
- Acclimate 6 hours; install at 65 °F or warmer
- Brace 24 hours; no nails or screws through panels
- Anchor grab bars and seats to blocking behind the panels
- Full steps: Shower Simply wall set installation guide

Accessories

- Inside corner trim, 96 in · Wall trim kits · Window trim kit
- Corner soap shelves · Recessed wall and shampoo shelves
- Grab bars · Fold-up shower seats